



SPARTAN TOOL

FOR TOUGH CUSTOMERS. SINCE 1943.



PRODUCT MANUAL

Urban Warrior Skid Mount Sewer Jetter

Spartan Tool LLC | 1618 Terminal Road | Niles, MI 49120
order by phone **800.435.3866** order online **SpartanTool.com**

© 2024 Spartan Tool LLC
Part #757200US



Contents

WARNINGS	4
FEATURES	5
DESCRIPTION—COMPONENTS	6
DESCRIPTION—CONTROLS	11
eController Functions	11
Corona Display	12
Push Buttons and Indicating Lights	12
Navigation Bullets	13
HP Hose Reel Mode	13
Management Mode	13
Hose Counter (if equipped)	14
Tachometer	14
Remote Control	15
SAFETY INSTRUCTIONS	16
IMPORTANT SYMBOLS	18
MECHANICAL OPERATION	19
Check Before Departure	19
Placement of Urban Warrior	19
Prior to Starting the Urban Warrior	19
Starting the Engine	20
Electric Hose Reel Pivot Locking Device	21
Hydraulic Reel Control	22
High Pressure Hose Guide	22
ECONTROLLER OPERATION	23
Management Mode	23
Emergency Stop Test	24
Battery Indication	24
RIOMOTE® CONTROL OPERATION	24

OPERATING INSTRUCTIONS 25

 Cleaning a Drain Line 25

 Stop Spraying 26

 Care of the HP Hose..... 26

 Cold Weather Operation 26

 Cleaning a Wall, Terrace, or Floor 27

 Secure After High-Pressure Cleaning 27

ECONTROLLER ERRORS..... 28

 Emergency Stop 28

 Engine Temperature 28

 Heat Exchanger High Temperature 28

 Hydraulic Oil High Temperature 29

 Oil Level..... 29

 Coolant Level..... 29

 Battery Charge 30

 Run Dry 30

 Service Interval 30

MAINTENANCE 31

 Daily Maintenance..... 31

 Minor Service..... 32

 Hydraulic System 33

 Extensive Periodic Maintenance..... 34

 Maintenance Schedule..... 34

TECHNICAL SPECIFICATIONS 35

TROUBLESHOOTING 37

APPENDIX A: ENGINE CONTROL MODULE 39

APPENDIX B: MACHINE DIMENSIONS..... 40

APPENDIX C: ACCESSORIES 41



Warnings

- Read the safety and operating instructions before using any Spartan Tool product. Drain and sewer cleaning can be dangerous if proper procedures are not followed and appropriate safety gear is not utilized. Read the engine owners' manual for instructions and safety precautions on engine operation.
- Gasoline is extremely flammable and is explosive under certain conditions.
 - Refuel in a well ventilated area with the engine stopped. Do not smoke or allow flames or sparks in the area where the engine is refueled or where gasoline is stored.
 - Do not overfill the fuel tank (there should be no fuel in the filler neck). After refueling, make sure the tank cap is closed properly and securely.
- Explosive fuel can cause fires and severe burns. Fuel is flammable and its vapors can ignite. Store fuel only in approved containers, in well ventilated, unoccupied buildings. Do not fill the fuel tank while the engine is hot or running, since spilled fuel could ignite if it comes in contact with hot parts or sparks from ignition. Do not start the engine near spilled fuel. Never use fuel as a cleaning agent.
- Before starting unit, be sure to wear personal protective equipment such as safety goggles or face shield and protective clothing such as gloves, coveralls or raincoat, rubber boots with metatarsal guards, and hearing protection.
- Ensure the jet hose has been placed in the pipe (minimum of 6 feet suggested) before engaging the water pressure to prevent the hose from coming out of the pipe prematurely and causing injury.
- Always shut off the water pressure before pulling the hose out of the pipe. Mark the hose a minimum of 6 feet from the end to help ensure the hose is not accidentally pulled out of the pipe while still under pressure. Shut off the water pressure when the hose mark is encountered.



CAUTION: Portions of the system can still be under pressure even if the unit is not operating.

- Never point the wash gun at anyone while operating the unit. Injury may result.
- Drains and sewer can carry bacteria and other infectious micro-organisms or materials which can cause death or severe illness. Avoid exposing eyes, nose, mouth, ears, hands, and cuts and abrasions to waste water or other potentially infectious materials during drain and sewer cleaning operations. To further help protect against exposure to infectious materials, wash hands, arms and other areas of the body, as needed, with hot, soapy water and, if necessary, flush mucous membranes with water. Also, disinfect potentially contaminated equipment by washing such surfaces with a hot soapy wash using a strong detergent.
- For any questions, contact Spartan Tool at the address shown below.

CONTACT US

Spartan Tool LLC
1618 Terminal Road
Niles, MI 49120
800.435.3866
SpartanTool.com



SPECS

- Pipe Sizes: up to 18" diameter
- Max Water Pressure: 3,000 psi
- Max Water Flow: 19 GPM
- Water Capacity: 320 gallons with two rows of tanks (160 Extra Third Row Option)
- Unit Weight: 1,200 lbs (empty)
- Overall Size: 52³/₄"L x 49"W x 49⁹/₁₆"H
- Warranty: (1) year limited

FEATURES


- 50 HP Kubota Gasoline Engine
- P52 Speck/Giant Triplex Pump
- eControl: LCD screen and easy-to-use jog-wheel for single click operation of machine
- LED display and warning lights provide machine status at a glance
- Pressure can be continuously adjusted with accessible handwheel
- Hose length counter
- Remote control
- 1/2" x 360' of Maxflow HP hose
- 115' of supply hose
- Pivoting 180° hose reel, hydraulically operated with freewheel system
- Powder coated steel frame

SAFETY

- Run dry protection with override ability
- Automatic engine shutdown protection for high water temperature, engine temperature, low engine oil, or low engine coolant
- Electric reel latching mechanism for easy pivoting and safety




Description—Components

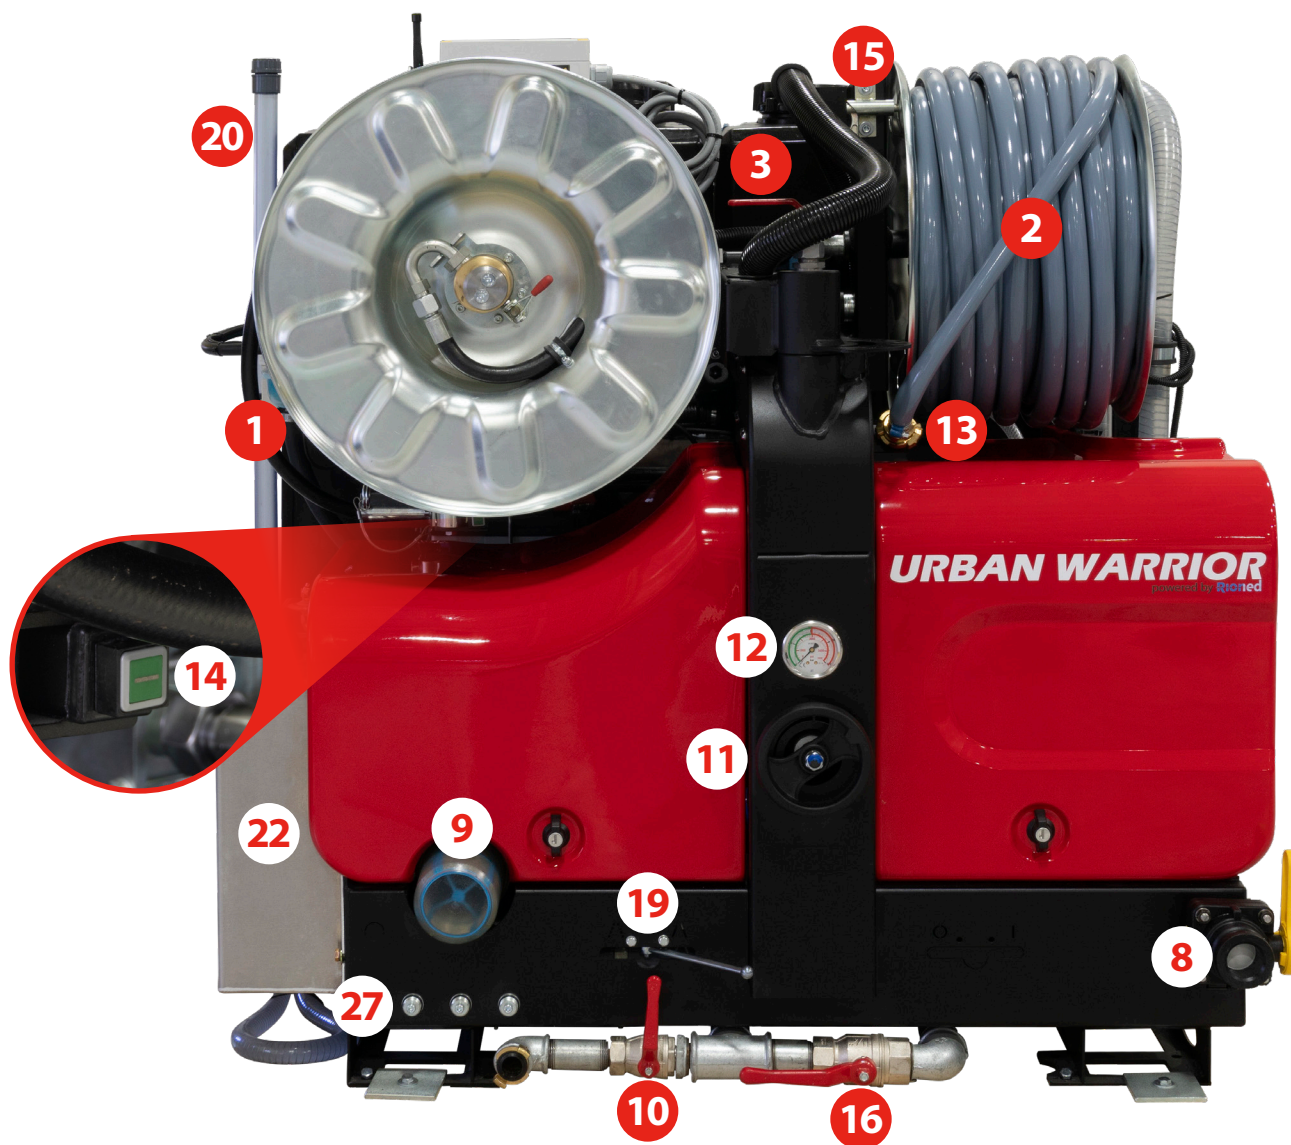


- | | | |
|--|--|---|
| 1. High-pressure hose - 75729130 | 10. Drain valve - 75715380 | 20. Water tank level indicator - 75729173 |
| 2. Supply hose on reel - 75729231 | 11. Pressure regulator - 75729103 | 21. Water tank - 75727001 |
| 3. Supply hose valve | 12. Pressure gauge | 22. Fuel tank |
| 4. eController - 75729117 | 13. Supply hose holder | 23. Engine |
| 5. Hose holder | 14. Pivot Locking Device | 24. Battery |
| 6. Hose guide | 15. Supply hose reel lock | 25. ECM (Engine Control Module) |
| 7. High-pressure (HP) valve - 75729105 | 16. Water filter valve | 26. Hydraulic Hose Reel Speed Control |
| 8. Supply pipe | 17. HP pump | 27. Nozzle holders |
| 9. Water filter - 757292108
Strainer - 75729125 | 18. Hydraulic oil reservoir - 75718002 | 28. Catalytic converter |
| | 19. Pulsator valve | |

Description—Components

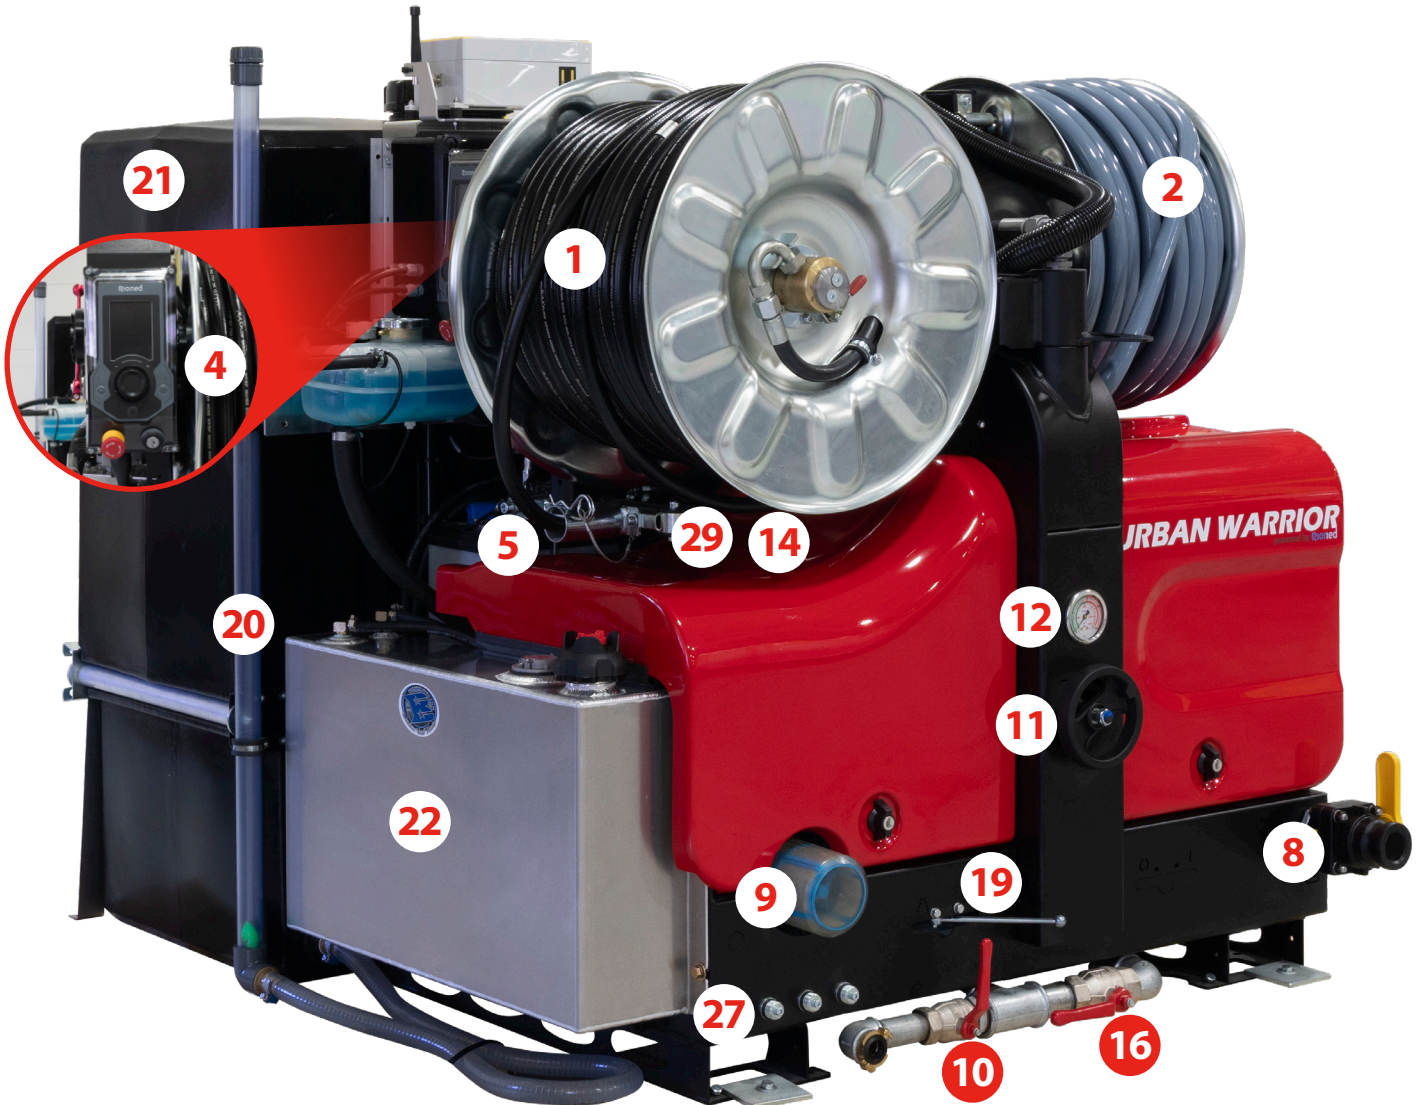

- | | | |
|--|--|---|
| 1. High-pressure hose - 75729130 | 12. Pressure gauge - 75729110 | 22. Fuel tank |
| 2. Supply hose on reel - 75729231 | 13. Supply hose holder | 23. Engine |
| 3. Supply hose valve | 14. Pivot Locking Device
Swingarm Locking Pin - 75718003 | 24. Battery |
| 4. eController - 75729117 | 15. Supply hose reel lock | 25. ECM (Engine Control Module) |
| 5. Hose holder | 16. Water filter valve | 26. Hydraulic Hose Reel Speed Control |
| 6. Hose guide | 17. HP pump | 27. Nozzle holders |
| 7. High-pressure (HP) valve - 75729105 | 18. Hydraulic oil reservoir - 75718002 | 28. Catalytic converter |
| 8. Supply pipe | 19. Pulsator valve | 29. Shroud Button - 75729107
Push Button - 75729108
Button Contact - 75729109 |
| 9. Water filter - 757292108 | 20. Water tank level indicator - 75729173 | |
| 10. Drain valve - 75715380 | 21. Water tank - 75727001 | |
| 11. Pressure regulator - 75729103 | | |

Description—Components

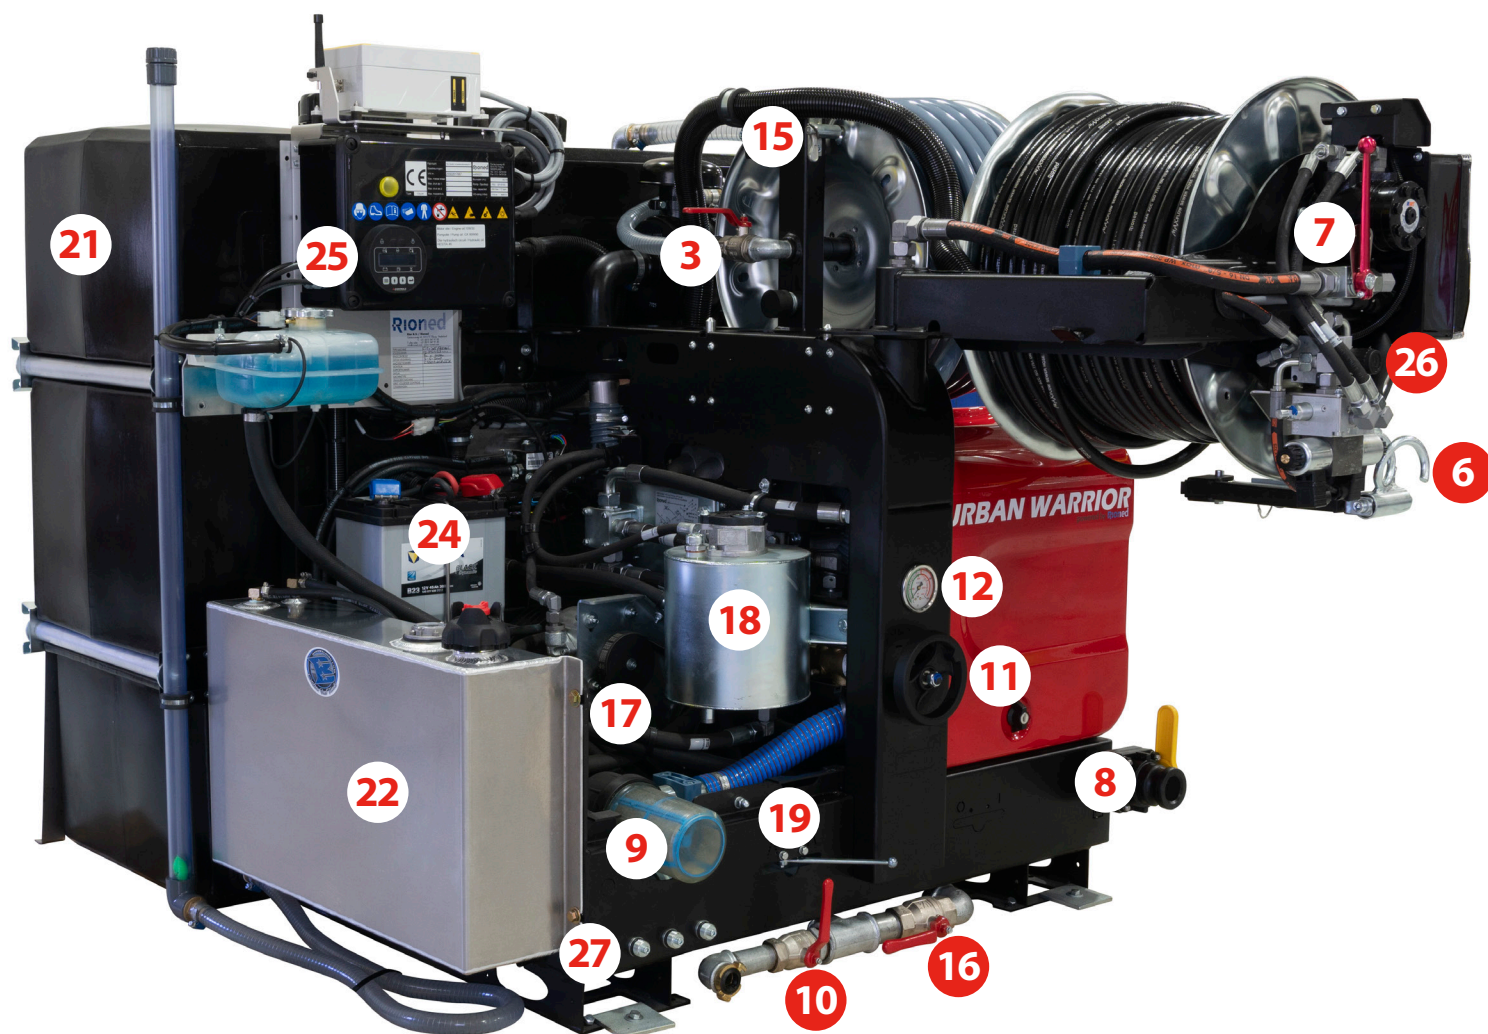


- | | | |
|--|--|---|
| 1. High-pressure hose - 75729130 | 10. Drain valve - 75715380 | 20. Water tank level indicator - 75729173 |
| 2. Supply hose on reel - 75729231 | 11. Pressure regulator - 75729103 | 21. Water tank - 75727001 |
| 3. Supply hose valve | 12. Pressure gauge | 22. Fuel tank |
| 4. eController - 75729117 | 13. Supply hose holder | 23. Engine |
| 5. Hose holder | 14. Pivot Locking Device | 24. Battery |
| 6. Hose guide | 15. Supply hose reel lock | 25. ECM (Engine Control Module) |
| 7. High-pressure (HP) valve - 75729105 | 16. Water filter valve | 26. Hydraulic Hose Reel Speed Control |
| 8. Supply pipe | 17. HP pump | 27. Nozzle holders |
| 9. Water filter - 757292108
Strainer - 75729125 | 18. Hydraulic oil reservoir - 75718002 | 28. Catalytic converter |
| | 19. Pulsator valve | |

Description—Components



- | | | |
|--|---|---------------------------------------|
| 1. High-pressure hose - 75729130 | 11. Pressure regulator - 75729103 | 21. Water tank - 75727001 |
| 2. Supply hose on reel - 75729231 | 12. Pressure gauge | 22. Fuel tank |
| 3. Supply hose valve | 13. Supply hose holder | 23. Engine |
| 4. eController - 75729117 | 14. Pivot Locking Device | 24. Battery |
| 5. Hose holder | 15. Supply hose reel lock | 25. ECM (Engine Control Module) |
| 6. Hose guide | 16. Water filter valve | 26. Hydraulic Hose Reel Speed Control |
| 7. High-pressure (HP) valve - 75729105 | 17. HP pump | 27. Nozzle holders |
| 8. Supply pipe | 18. Hydraulic oil reservoir - 75718002 | 28. Catalytic converter |
| 9. Water filter - 757292108 | 19. Pulsator valve | |
| 10. Drain valve - 75715380 | 20. Water tank level indicator - 75729173 | |

CONTROLS AND INDICATIONS

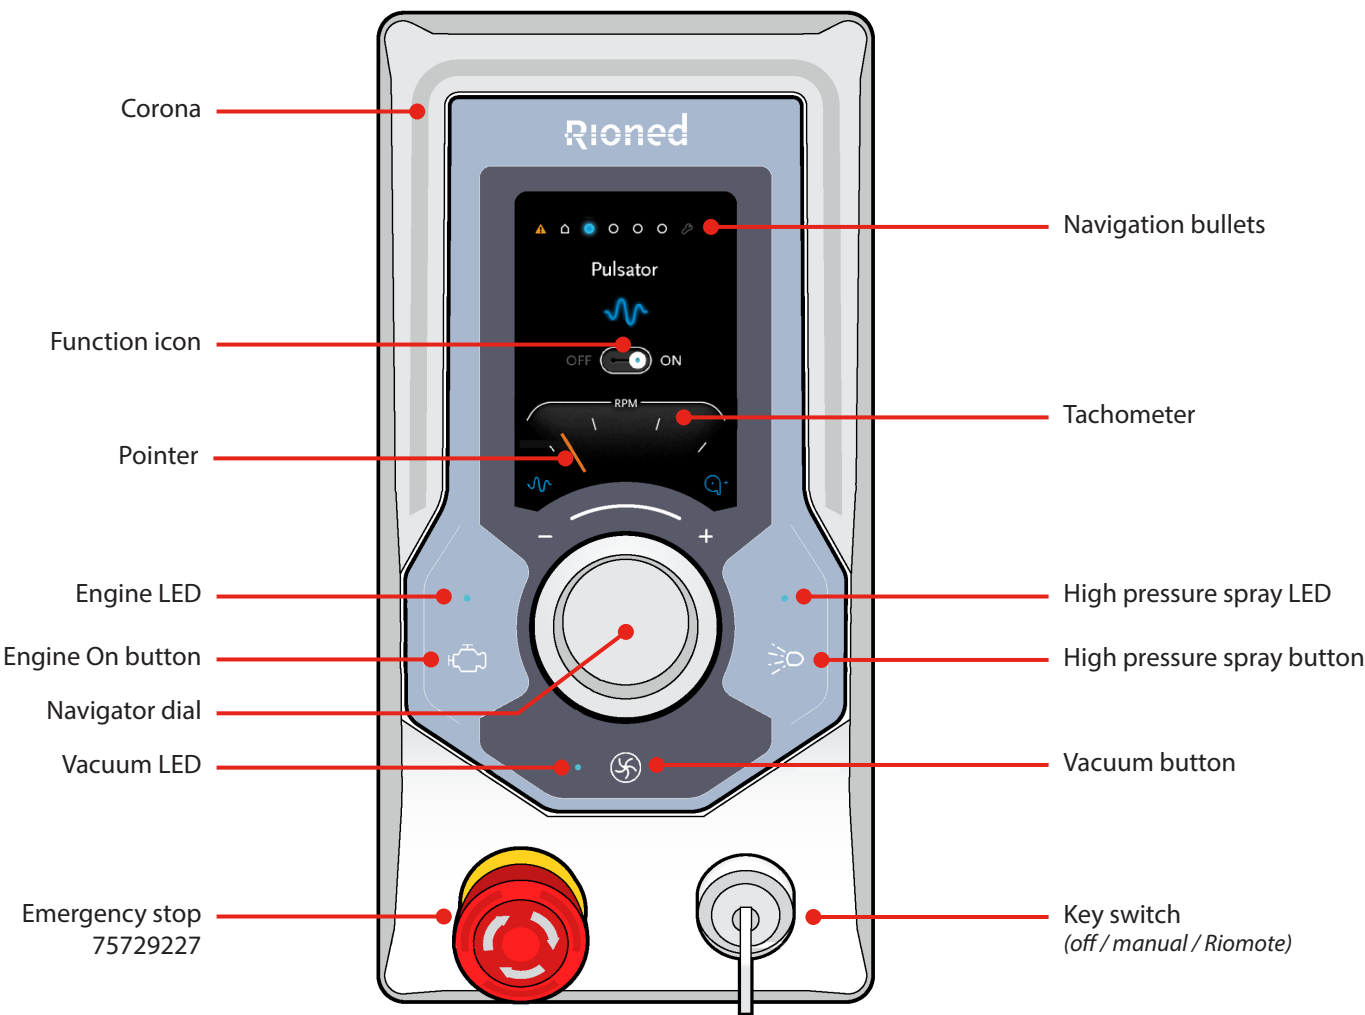



ECONTROLLER FUNCTIONS

Spartan Tool provides several options on the Urban Warrior skid mount sewer jetter. As a result, there are multiple eControl configurations to accommodate the features available on any particular unit.

This section of the manual will cover available functions of the Two Function eController and the Three Function eController.

The two figures below identify the Two Function and Three Function eController.



2 FUNCTION ECONTROLLER

The two function remote is identified by the **two blue function indicators** at the top of the LCD display.

The two functions are:

- Home function
- Maintenance function



3 FUNCTION ECONTROLLER

The three function remote is identified by the **three blue function indicators** at the top of the LCD display.

The three functions are:

- Home function
- HP hose reel control
- Management function

Description—Controls

CORONA DISPLAY

The Corona on the eController is normally off (gray).



Blue corona indicates
set to **Riomote Control**

Red corona indicates
eController error

See page 27 (eController
Errors) for alarm functions

Orange corona indicates
pre-start functions or
one of two **error conditions**:


- Run dry (no water in tank)
- Error oil level

PUSH BUTTONS AND INDICATING LIGHTS

- The **Engine On** light/button indicates the status and controls the starting of the engine. (See page 19, *Starting the Engine*, for more information.)
- The **High Pressure Spray** light/button indicates the status and controls the high pressure spray valve. (See page 24, *Cleaning a Drain Line*, for more information.)

The **Blue LED** above each button will **blink** when the corresponding function is available. (The engine is ready to start or high pressure spray is available.)

The **Blue LED** above each button will **light solid** when the corresponding function is active. (The engine is running or the high pressure spray valve is open.)

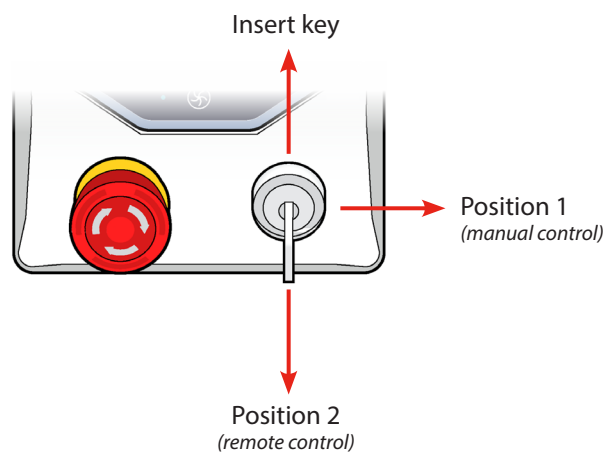

NAVIGATION BULLETS

The navigation bullets have two general states:




Passive (gray)



Active (blue)

Depending on the user's location in the menu, one bullet is on display, or in the case of a pop-up eController error, all navigation bullets disappear. (See page 27, **eController Errors**, for a list of pop-up displays.)

Features in navigation bullets are in specified order, if applicable:

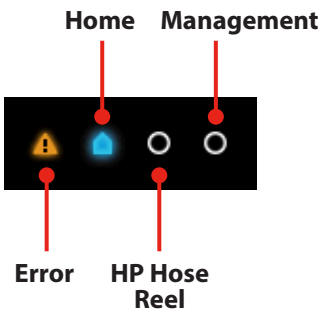


The **Error** navigation icon is only visible and can be navigated when an error is applicable.



The **Home** navigation icon is the default position and normally displays engine run time and HP hose counter.


ECONTROLLER FUNCTIONS

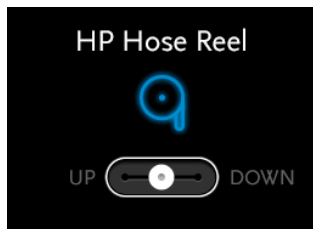


HP Hose Reel Mode

When the eController is set to **HP Hose Reel** the LCD displays the hose position and the up/down control positions. The hose reel is actuated by rotating the Navigator dial clockwise to select **down** and counter clockwise to select **up**. Depress the Navigator dial to select the action.

The speed of the hydraulic drive using the eController is controlled by adjusting the speed control unit which throttles the hydraulic flow to the reel drive hydraulic motor. (See page 21, **Rewind Hose Using Hydraulic Reel**.)

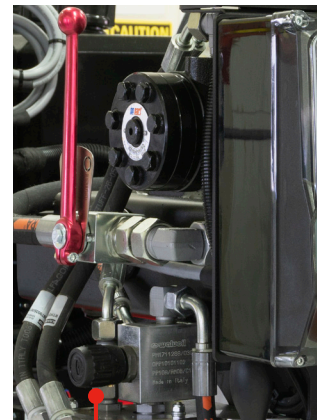

Hydraulic Speed Control

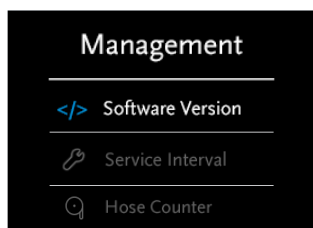


Management Mode

When the eController is set to Management Mode, the LCD displays a menu of three functions that can be selected by rotating the Navigator dial and activated by depressing the navigation knob.

- **Software Version** displays the current version of the controller software.
- **Service Interval** displays the days and run hours until maintenance is required.
- **Hose Counter** displays the length of hose off the HP hose reel.


Description—Controls

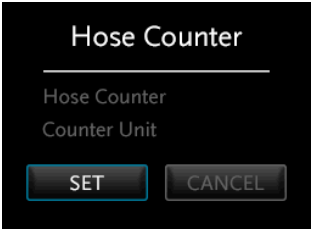

Hose Counter (if equipped)

When the eController is set to Hose Counter mode, the LCD displays a menu of two functions that can be selected by rotating the Navigator dial and activated by depressing the navigation knob.

 - **Hose Counter** allows the user to select on or off.
- **Counter Unit** allows the user to select meters or feet.




Tachometer

The pointer indicates the engine's current RPM.

OLD STYLE REMOTE CONTROL (UP TO SUMMER 2020)


Hand-Held Remote Sender

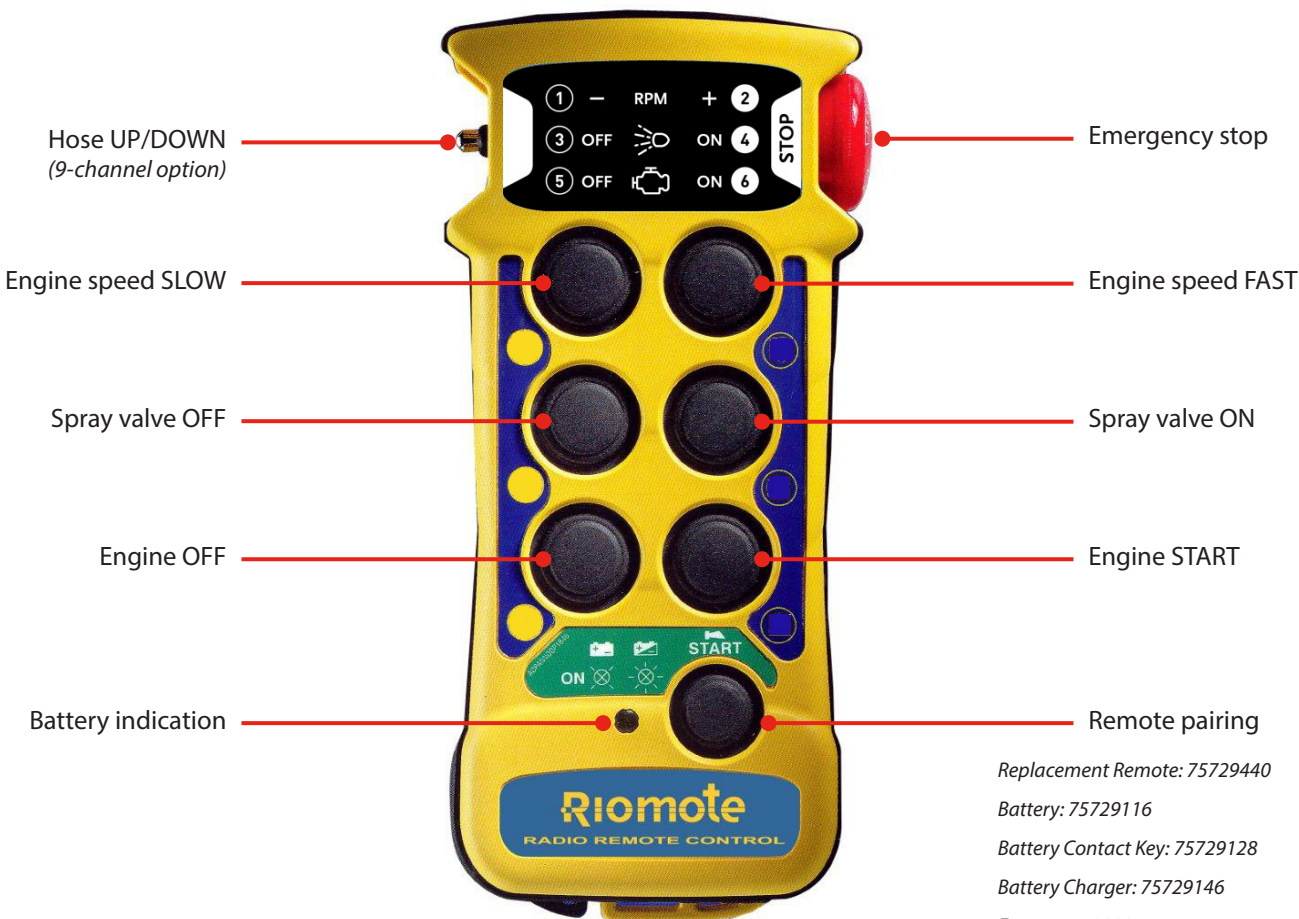

Replacement Remote: 75729440
Battery: 75729116
Battery Contact Key: 75729128
Battery Charger: 75729146
E-stop: 75729227

NEO REMOTE CONTROL (SUMMER 2020 TO CURRENT)

Hand-Held Remote Sender

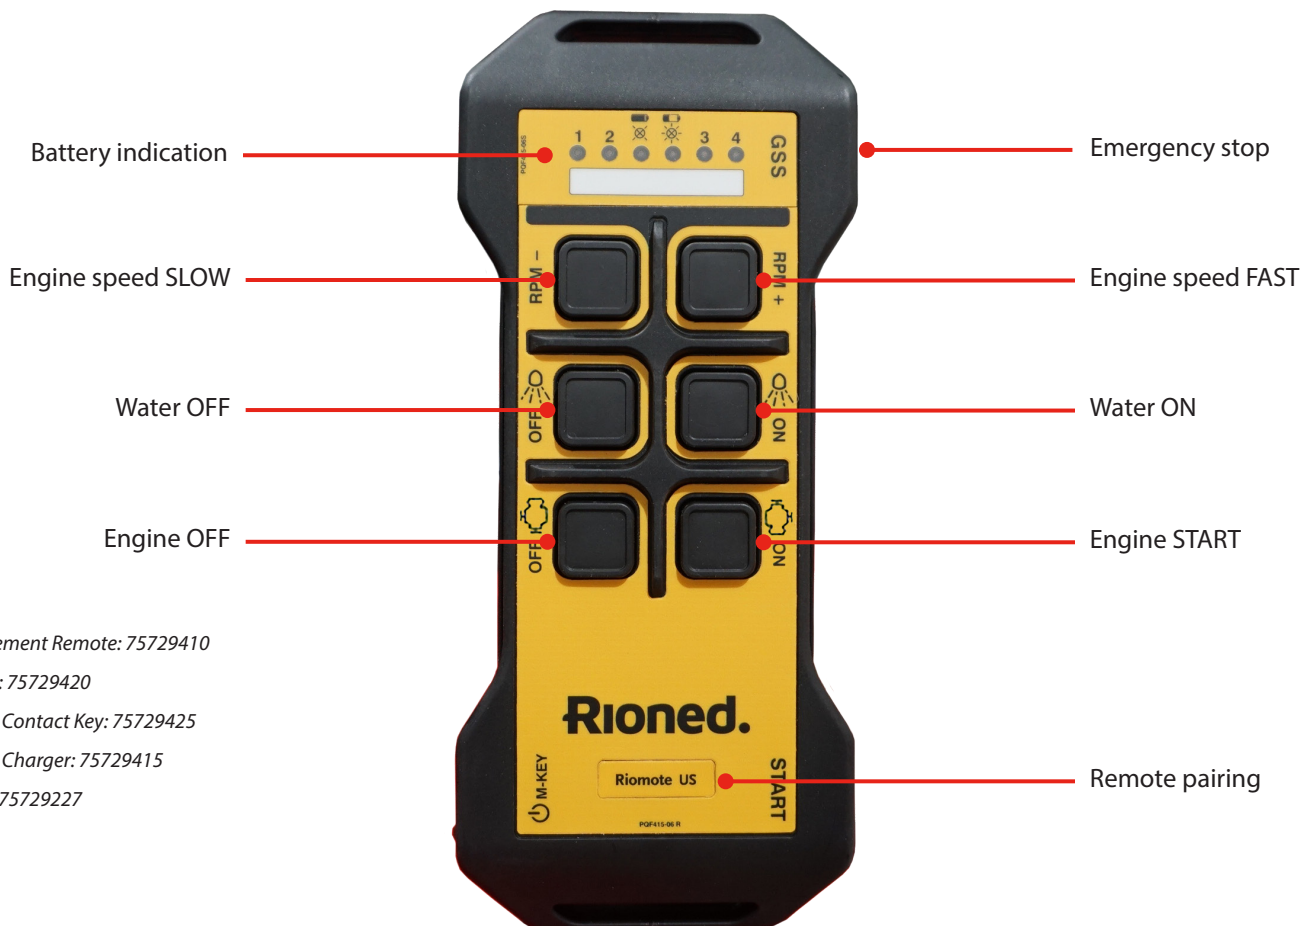

Replacement Remote: 75729410

Battery: 75729420

Battery Contact Key: 75729425

Battery Charger: 75729415

E-stop: 75729227

The **Riomote® radio remote control** consists of a large waterproof and shockproof hand-held sender and a unit-mounted receiver. The system is provided with separate batteries (8 hours per charge) and is supplied with a battery charger. The Riomote® radio remote control is available in 7-channel and 9-channel models dependent on the functions available on the eController.

UNIT-MOUNTED RECEIVER





Safety Instructions



WARNING: Read the **Operator's Manual** thoroughly before using any Spartan Tool product. Drain and sewer cleaning can be dangerous if proper procedures are not followed. Know the proper operation, correct applications for your Spartan Tool products

EMERGENCY STOP

This machine is equipped with an **Emergency Stop**. By operating the Emergency Stop, the machine will shut down. Do not use this button for normal stopping. Only use it when dangerous situations occur. After use, remove the danger and then rotate the Emergency Stop button clockwise to be able to start up again. Ensure the Emergency Stop can always be reached.

PRESSURE REGULATOR

The **Pressure Regulator** functions to ensure that the working pressure never gets too high. It functions like a safety valve, relieving water to the storage tank to reduce pressure in the HP hose line.

PERSONAL PROTECTIVE EQUIPMENT

The following personal protective equipment should be worn by personnel operating or working with the Urban Warrior:

- Ear protection
- Protective safety glasses or goggles
- Gloves (recommended)
- Waterproof work clothing (recommended)
- Spray boots for use with the spray gun (recommended)

WORK AREA

The following precautions must be observed when establishing a work area for use of the Urban Warrior:

- Clearly mark the work area.
- Maintain a minimum distance of 20 feet from the work area.
- Remove all loose materials from inside the work area.
- Never spray from an unstable surface (ladder, boat, scaffold, etc.).
- Never use in a confined space (closed room).
- Ensure there are no combustible materials in the area.
- The area must be adequately ventilated to prevent accumulation of carbon monoxide.
- DO NOT use corrosive chemicals in conjunction with Spartan Tool sewer jetters. Only environmentally-approved chemicals should be introduced into drain lines.

GENERAL PRECAUTIONS

- Do not let the machine operate without supervision.
- Keep children and animals away from the machine.
- DO NOT spray on humans or animals. *If the skin is penetrated, immediately seek medical attention.*
- Prevent damage from debris or flying parts.
- Avoid spraying near electrical connections and other electric components if you are cleaning with a spray gun.
- Never block the controls in any way.
- Put personal protective equipment on BEFORE you start the machine.
- Ensure that the spray nozzle does not leave the drain.



SAFETY STICKERS


1. Safety glasses, hard hats , and hearing protection are required
2. Safety shoes are required
3. Be familiar with the user's manual
4. Hand protection is required
5. Wear protective clothing against caustic material
6. No eating or drinking
7. Slipping hazard
8. Pinching hazard (hand injury)
9. Rotating machinery
10. Warning, machine auto start



Important Symbols

PRESSURE GAUGE

Operating Zone

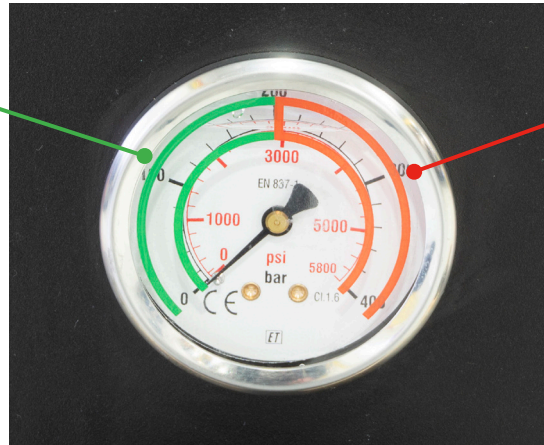

Danger Zone

The mechanical relief in the unloader valve will prevent pressure from exceeding 3000 PSI.



WARNING If the unit fails to maintain pressure within the operating zone, contact Spartan Tool Customer Service at 800.435.3866 or by email at CustomerService@SpartanTool.com.



CHECK BEFORE DEPARTURE

Before you drive away with the vehicle, check the following:

1. The high-pressure hose has been inserted into the hose holder (5) and secured with the locking pin.
2. The high-pressure hose reel is locked with the clutch engaged (30) (see page 21) and the manual hydraulic hose reel control lever is in the neutral position, or the eController is not in Hose Reel mode. (See page 21, **Hydraulic Hose Reel Control**, for more information.) The HP reel swing arm is locked in place with latch.
3. The supply hose is connected to the supply hose holder (19). The supply hose reel is locked by means of the reel locking device (15).
4. If temperatures are below freezing, the water tank should be emptied and the piping system drained and flushed with antifreeze. (See page 25, **Cold Weather Operation**, for more information.)
5. The vehicle is now ready for departure.




PLACEMENT OF URBAN WARRIOR

1. Put the vehicle at the desired location and set the parking brake.
2. Block the tires if using on an incline or uneven surface.
3. Mark the working area by establishing barriers to prevent inadvertent access to the work area.

PRIOR TO STARTING THE URBAN WARRIOR

1. Ensure there is adequate fuel in the fuel tank (22) for the intended task.
2. Ensure the water filter (9) is clean. Clean the filter, if necessary.
3. Check that the supply valve (16) to the water filter is open.
4. Check that the high-pressure valve (7) at the HP hose reel is closed.
5. Fill the water tank via the supply pipe (8) or the supply hose. (The maximum water temperature is 55°C.)
6. Loosen the control wheel of the pressure regulator (11) (rotate counter-clockwise).
7. Attach the jetting nozzle onto the high-pressure hose.

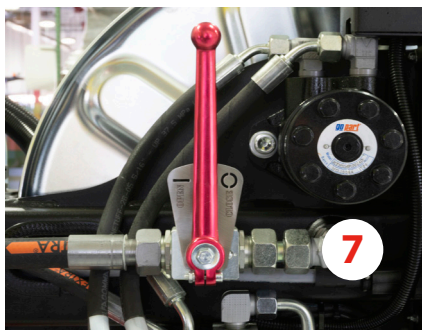

Mechanical Operation


STARTING THE ENGINE






IMPORTANT! The machine is equipped with an **Emergency Stop**. By operating this Stop, the machine will shut down. Do not use this button for normal stopping. Only use when dangerous situations occur. After use, rotate the Emergency Stop clockwise to be able to start again. Make sure the Emergency Stop can always be reached.



CAUTION! Put on protective safety goggles and ear protection before starting the machine.

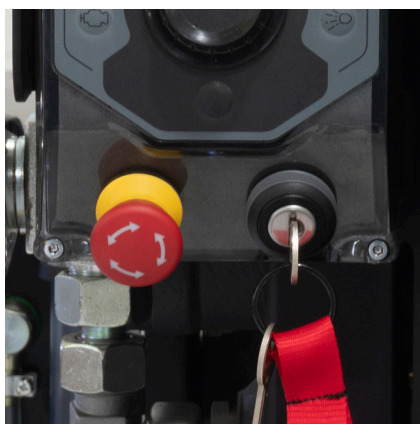


1. Put the key in the eController key switch.

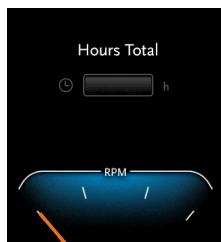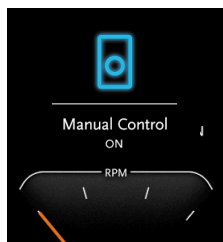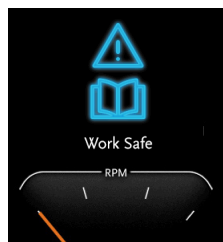

2. Turn the key clockwise to position 1, **Manual Control on**.

- **Work Safe** is displayed for 2 seconds.
- Icon **Manual Control on** is displayed for 2 seconds.
- Then the main menu is displayed.

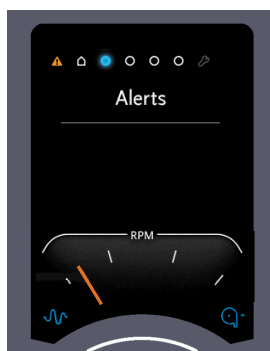

3. Check the **Error icon**.


- If the error icon is visible, then check the **eController Error icon**. (See page 27 for a description of eController Errors.)




38

39

4. If the error icon is not visible, depress the **Engine On** button for two seconds.
 - After 5 seconds, the engine starts.
 - With the engine running, the blue **Engine LED** light (38) and the **Engine On** light (39) is displayed for 2 seconds.
 - The main menu on the eController is displayed after 5 seconds.

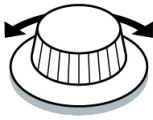

5. Increase (clockwise) or decrease (counter clockwise) RPM by turning the Navigator dial.

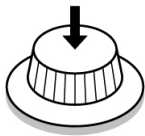


6. Depress the Navigator dial to display the **Navigation Bullet** menu.
 - Let the engine warm up. After 3 minutes, the machine is ready for use.
 - Press the **Engine On** button (39) to adjust RPMs with the Navigator dial.

ELECTRIC HOSE REEL PIVOT LOCKING DEVICE

There are two locking mechanisms associated with the high pressure hose reel arm.

1. **Electric Push Button**
2. **Manual Pull Cable**

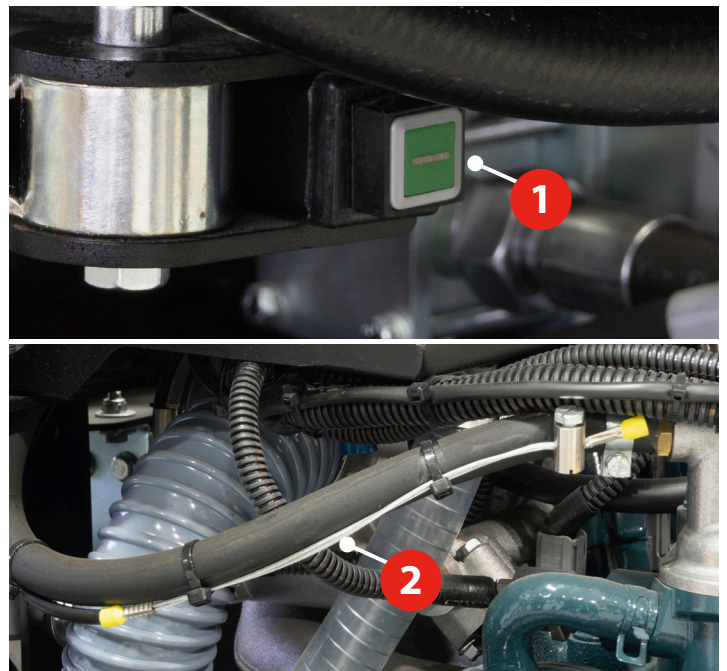

Mechanical Operation


HYDRAULIC REEL CONTROL *(if equipped)*

The hydraulic control lever is spring loaded to default to the **Neutral Position** (A) where the hose reel is locked by the hydraulic actuator.


- Pushing the control lever **up** (position B) will actuate the hydraulic motor to wind the hose onto the reel.
- Pushing the control lever **down** (position C) will actuate the hydraulic motor to unwind the hose off the reel.
- Due to the proportional functioning of this valve you can control the speed of the reel by movement of the lever away from the **center position** (A).
- Pushing the control level into **position D**, (a maintaining position) will allow the hose reel to move without the aid of the hydraulic motor. This allows the hose to unwind as the high pressure hose nozzle works its way through a drain line.

A **clutch assembly** (30) on the HP hose reel drive unit can be disengaged to allow the hose reel to free wheel for pulling the hose off the reel manually.

The **hydraulic speed control knob** (26) can be adjusted to control the range of speed when using the hydraulic reel control lever. (This feature is only available on model equipped with the 9-channel remote.)

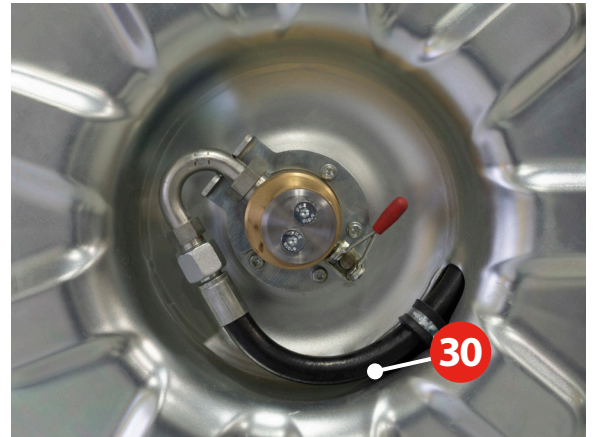

For 5-channel remote with manual hydraulic valve

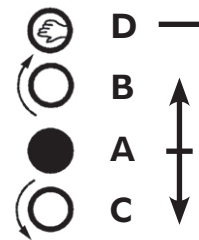

WARNING! Never block the Hydraulic Hose Reel lever and always control it with one hand while guiding the high-pressure hose by means of the hose guide.

HIGH PRESSURE HOSE GUIDE

The purpose of the **High-Pressure Hose Guide** (6) is to guide the HP hose onto and off of the hose reel.

- Put the end of the HP hose through the opening of the hose guide (6).
- Moving the hose guide right and left guides the hose evenly on the hose reel.






MANAGEMENT MODE

Management Mode functions to display the current software version, required service intervals, and the hose reel counter.

1. Rotate the Navigator dial to set the navigation bullet to the **last position, Management**.
2. Depress the Navigator dial to activate the Management function.
 - The Navigation bullet extinguishes.
 - The Management underline illuminates.
3. Once the Management function is activated, the three menu options are displayed which include: Software version, Service interval and Hose counter.
4. Each menu item can be displayed by selecting the item with the Navigator dial and depressing the dial to activate the selection.

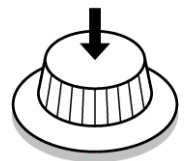



Riomote® Control Operation



RIOMOTE® CONTROL

The **Riomote® remote control** provides the ability to operate the high pressure machine jetter from a distance. There are multiple versions of the remote control based on the available functions of the machine.

EMERGENCY STOP TEST

Check that the emergency stop works before working with the Riomote® control. Proceed as follows:

1. Insert the key into the **eController key switch**.
2. Turn the key to **position 2, Remote Control on**.
 - **Work Safe** is displayed for 2 seconds.
 - **Riomote® Control on** is displayed continuously.
 - Corona illuminates blue and is blinking.
3. Switch the Riomote® control **on**.
 - Press and hold the **Start button** on the Riomote® to link the Riomote® with the Urban Warrior.
 - Release the **Start button** when the blue corona stops blinking.
 - Corona illuminates continuous blue when the Riomote® control is in contact with the receiver.
4. Start the engine using **Engine Start button** on the Riomote® control.
5. Depress the **Stop button** to exercise the Emergency Stop function.

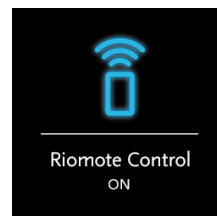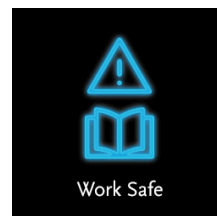


BATTERY INDICATION

If the **Battery indicator** on the Riomote control lights continuously, the battery must be recharged.



NOTE! The engine will shut down if the remote is out of range or the battery loses charge.

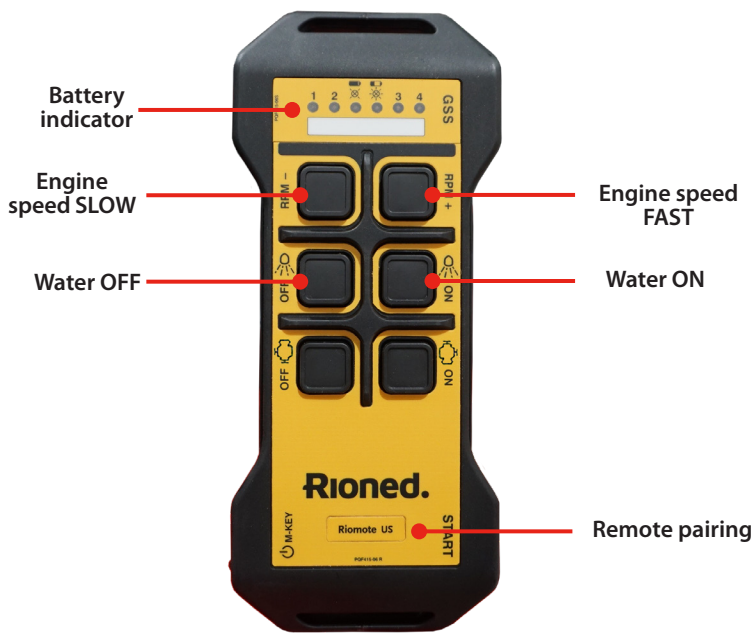




NOTE! If the engine does NOT stop by using the Riomote® control, contact Spartan Tool Customer Service.

Operating Instructions




CLEANING A DRAIN LINE

1. Attach a suitable nozzle onto the high-pressure hose.
2. With the hose reel out of gear (Position D, page 21), pull the hose through the **hose guide** (6) to facilitate guiding the hose.
3. The hose can be unwound short distances with the hydraulic hose reel out of gear.
4. Put the nozzle into the drain to be cleaned (a minimum of 6 feet).
5. Rotate the **pressure regulator** (11) clockwise to increase pressure to the desired value on the pressure gauge (12).
6. Open the **high-pressure valve** (7).
7. Depress the **high pressure on button** (35).
 - Water begins spraying out of the nozzle at the end of the hose.
 - **High pressure LED** (33) lights blue.
 - **High Pressure On** is displayed on the eController screen for 2 seconds.
 - After 5 seconds, **Main Menu** is displayed on the eController screen.
8. Increase or decrease engine RPM by turning the **Navigator dial**.
9. The hose will now unwind and work its way into the drain line.
10. When possible, jet the drain line from the low end to the high end of the pipe.
11. Check for water draining away as an indication that the blockage has been cleared in the drain line.
12. When the blockage has been cleared, continue to flush the pipe while rewinding the high-pressure hose.

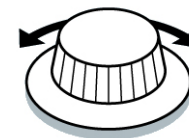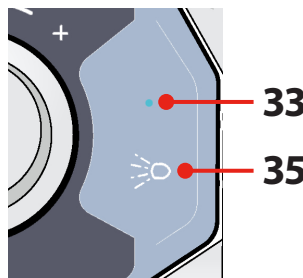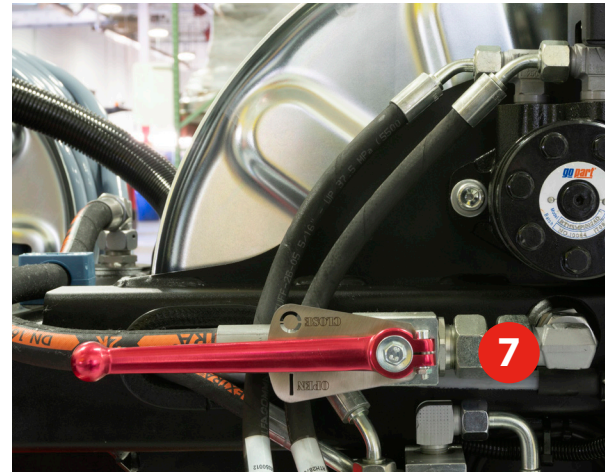

Navigator dial

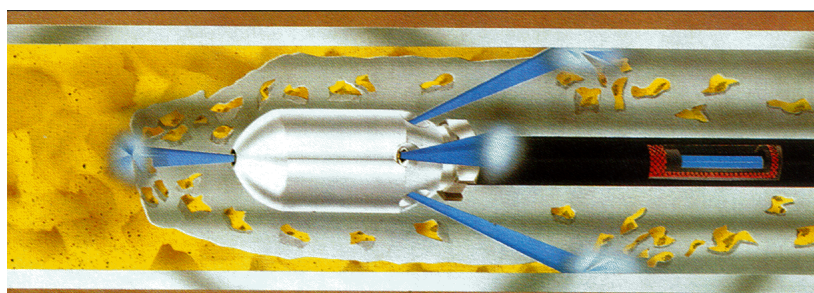

Operating Instructions




ATTENTION! Ensure that the spraying nozzle does not leave the drain while spraying. Water under high pressure may cause severe injury.

STOP SPRAYING

Depress the **high pressure button** (35) to shut the high pressure valve.

- The **high pressure LED** (33) extinguishes.
- **High Pressure Off** appears on the eController display for 2 seconds.
- Water spray at hose nozzle stops.
- Engine RPM decreases.
- Close the **high pressure valve** (7).

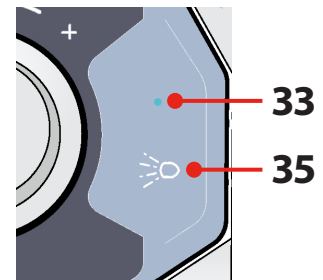

CARE OF THE HP HOSE

- Always clean the hose after use.
- Ensure there are no sharp objects near the hose.
- Ensure vehicles do not cross over the hose.



IMPORTANT! Rewind hose onto reel under pressure to avoid crushing. If machine has run out of water, ensure hose is unwound before pressurizing.

COLD WEATHER OPERATION

Your high-pressure device may freeze up in cold weather and temperatures below 32°F. A number of safety precautions must be taken.

Additional preparations before departure:



1. Drain the water tank by opening the drain valve.
2. When all the water has been removed or drained, remove the water filter.
3. Clean the filter and mount it in opposite order.
4. Close the drain valve.
5. Remove the nozzle/gun from the HP hose.
6. Antifreeze unit with optional Antifreeze System.

CLEANING A WALL, TERRACE, OR FLOOR




CAUTION! Before using a spray gun, set the jetter pressure below the maximum spray gun pressure (+/- half the maximum spray gun pressure). Do this prior to starting the engine. Once the engine is running, jetter pressure can be increased by turning the HP regulator handwheel to the working pressure. DO NOT exceed the green band pressure on the pressure gauge.

1. Attach the **spray gun** (B) onto the high-pressure hose.
2. Disengage the **clutch** and completely unroll the **high pressure hose**.
3. Attach the **spray lance gun** (C), securing the quick coupling tightly.
4. Open the **manual HP valve** (7).
5. Depress the **High Pressure On button**.
6. Throttle up the engine speed by rotating the **Navigator dial** clockwise.
7. Rotate the **pressure regulator hand wheel** (11) clockwise until the desired operating pressure is reached when the spray gun is open.

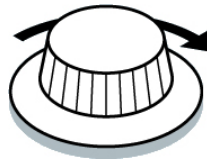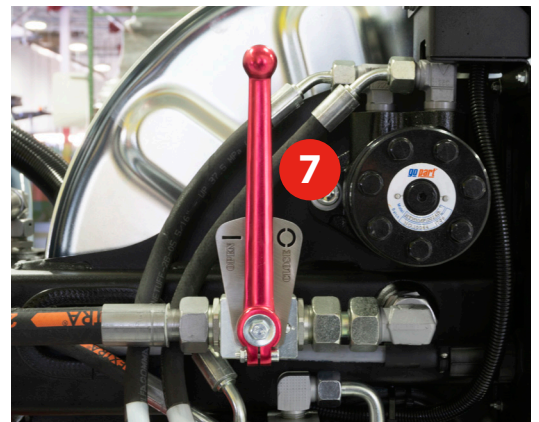

SECURE AFTER HIGH-PRESSURE CLEANING

1. Depress the **high pressure button** (35) to shut the high-pressure valve and throttle down the engine.
2. Close the **manual high pressure valve** (7).
3. Depress the **Engine On button** (34) for more than 1 second to stop the engine.
4. Rewind the hose.

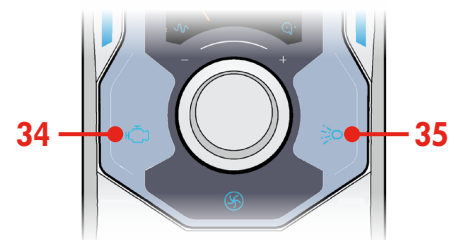

IMPORTANT! Rewind hose onto reel under pressure to avoid crushing. If machine has run out of water, ensure hose is unwound before pressurizing.



eController Errors



EMERGENCY STOP

1. The **Emergency Stop icon** illuminates on the eController when the Emergency Stop button is depressed.
 - Engine stops
 - High pressure valve closes
 - Pulsator valve closes (if equipped)
 - Hose reel switches off
2. Operation can only be restarted after rotating the Emergency Stop button to release it.



ENGINE TEMPERATURE

1. The **Engine Temperature icon** illuminates when high engine temperature is detected (240° F).
 - Engine stops
 - High pressure valve closes
 - Pulsator valve closes (if equipped)
 - Hose reel switches off
2. The operator can acknowledge the alarm display by depressing the Navigator dial in Manual Mode.
3. Operation can only resume after engine temperature has cooled to clear the alarm.



HEAT EXCHANGER HIGH TEMPERATURE

1. The **Heat Exchanger High Temperature icon** illuminates when high temperature is detected.
 - Engine stops
 - High pressure valve closes
 - Pulsator valve closes (if equipped)
 - Hose reel switches off
2. The operator can acknowledge the alarm display by depressing the Navigator dial in Manual Mode.
3. Operation can only resume after heat exchanger temperature has cooled.



HYDRAULIC OIL HIGH TEMPERATURE

1. The **Hydraulic Oil Temperature icon** illuminates when high hydraulic oil temperature is detected.
 - Engine stops
 - High pressure valve closes
 - Pulsator valve closes (if equipped)
 - Hose reel switches off
2. The operator can acknowledge the alarm display by depressing the Navigator dial in Manual Mode.
3. Operation can only resume after the hydraulic oil temperature has cooled.



OIL LEVEL

1. The **Oil Level icon** illuminates when low engine oil level is detected.
 - Engine stops
 - High pressure valve closes
 - Pulsator valve closes (if equipped)
 - Hose reel switches off
2. The operator can override the alarm display by depressing the Navigator dial in Manual Mode and continue operation.



COOLANT LEVEL

1. The **Coolant Level icon** illuminates when low engine coolant level is detected.
 - Engine stops
 - High pressure valve closes
 - Pulsator valve closes (if equipped)
 - Hose reel switches off
2. The operator can acknowledge the alarm display by depressing the Navigator dial in Manual Mode.
3. The operator must refill the coolant level in order to restart the engine.




BATTERY CHARGE

1. The **Battery Charge icon** illuminates when low battery voltage is detected.
 - Engine stops
 - High pressure valve closes
 - Pulsator valve closes (if equipped)
 - Hose reel switches off
2. The operator can override the alarm display by depressing the Navigator dial in Manual Mode and continue operation.



RUN DRY

1. The **Run Dry icon** illuminates when low level is detected in the water tanks.
 - Engine stops
 - High pressure valve closes
 - Pulsator valve closes (if equipped)
 - Hose reel switches off
2. The operator can override the alarm display by depressing the Navigator dial in Manual Mode and continue operation.
3. The **High-Pressure LED** starts blinking when the run dry is active. The override remains active as long as the Navigator dial is depressed.

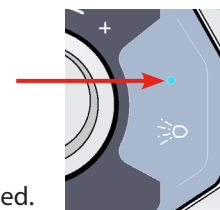

SERVICE INTERVAL

1. The **Service Interval icon** illuminates when any of the maintenance intervals have been exceeded. The error is also listed under the Management function on the eController.
 - Engine stops
 - High pressure valve closes
 - Pulsator valve closes (if equipped)
 - Hose reel switches off
2. After running 360 days or 250 hours (whichever comes first), the error message is displayed.
3. The operator can override the message by depressing the Navigator dial in Manual Mode.
4. The message will reappear the next time the machine is started.



CAUTION! Always stop the engine first and depressurize the system before servicing or repairing the machine. To depressurize the system, open the manual HP valve. If the spray gun is attached, you must also pull the trigger to release the pressure.


DAILY MAINTENANCE

Check Oil Levels


- Check all oil levels once a week (engine oil, HP water pump oil, hydraulic oil).
- Add oil if necessary (*see page "MOTOR" on page 37, Technical Specifications, Motor*).
- If oil level has dropped, this implies a leak in the system. In this case, check all gaskets, couplings, and hydraulic hoses in the system.
- Immediately repair damage and fill the system with the correct oil.




NOTE! During the break-in period, oil consumption may be greater than usual.

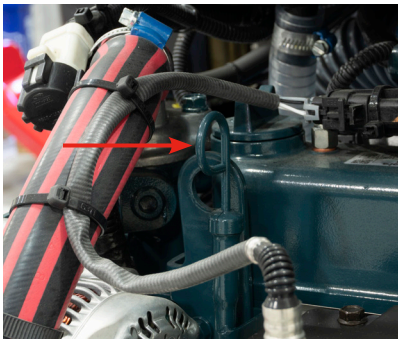

Engine Oil

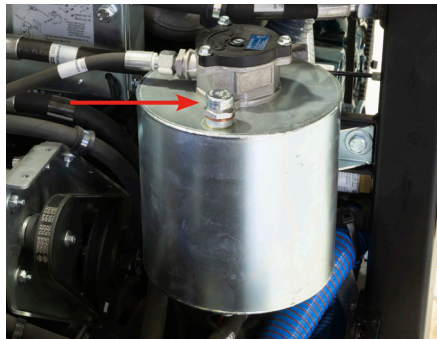


Hydraulic Oil

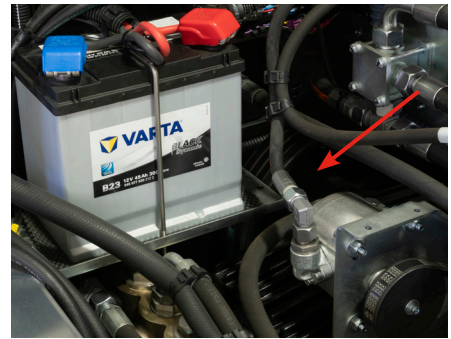

HP Water Pump Oil

Clean the Water Filter

1. Close the **water filter valve** (16).
2. Unscrew the cap from the **filter piece** (9).
3. Clean the filter and associated parts. After cleaning, assemble the parts in reverse order.
4. Open the **water filter valve** (16).
5. Check for leakage.

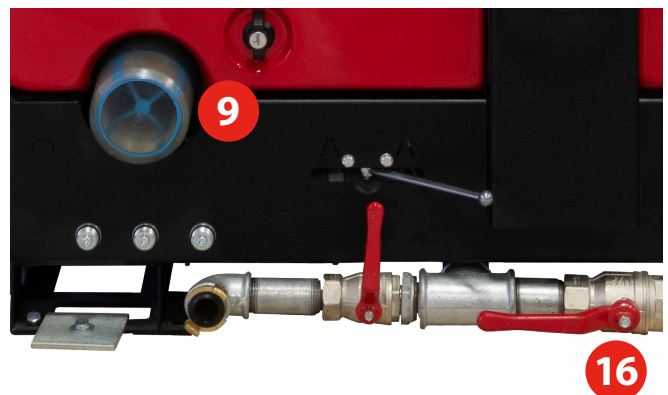

Maintenance

MINOR SERVICE

Minor service must be carried out **every 250 working hours** (or at least once every 6 months) and includes the following parts of the machine:

1. Drive and Engine

- Change the oil in the engine.
- Replace the oil filter.
- Clean the air filter.
- Replace the fuel filter.
- Check tension of the V-belt and increase tension if necessary.
- Check the condition of the battery.
- Check the torque of attachment bolts for the engine and tighten as necessary.

2. Carriage

- Lubricate all mechanical moving parts in the system. Check that all nuts and bolts have been correctly tightened.

3. Pump system

a. Cleaning the high-pressure control system:

- With the manual high-pressure valve closed, the pressure gauge should NOT indicate any pressure due to recirculation through the unloader valve.
- If the spray gun is connected and closed, the pressure gauge should NOT indicate any pressure due to recirculation through the unloader valve.
- If the pressure gauge does indicate a pressure, this implies a leakage in the system or the pop-off valve on the unloader valve may be dirty or damaged. (Contact Spartan Tool Customer Service for assistance.)
- If leakage is suspected, stop the machine, unscrew the hose coupling and clean or replace the pop-off valve on the unloader. Also, check the condition of the O-ring and gasket. (Contact Spartan Tool Customer Service for assistance.)

b. Regularly clean the high-pressure control system:

- Carefully remove all dirt.
- Proper maintenance will increase the service life of this part.

c. Changing the pump oil:


- Change the pump oil in the high-pressure pump after every 500 working hours (or at least once a year).

HYDRAULIC SYSTEM



IMPORTANT! Renew the hydraulic oil at least once a year!

1. Replace the hydraulic fluid in the reel drive system.
2. Check hydraulic oil level before each use. If level is not sufficient proceed as follows:
 - a. Stop the machine.
 - b. Ensure the unit is on a level surface.
 - c. Remove the dipstick (A) from the oil tank (B).
 - d. Clean the dipstick with a lint-free rag.
 - e. Put the dipstick back into the oil tank.
 - f. Remove the dipstick and check the oil on the dipstick is between maximum and minimum (C).
 - g. Fill oil, if necessary.
 - h. Return and tighten the dipstick to the oil tank.

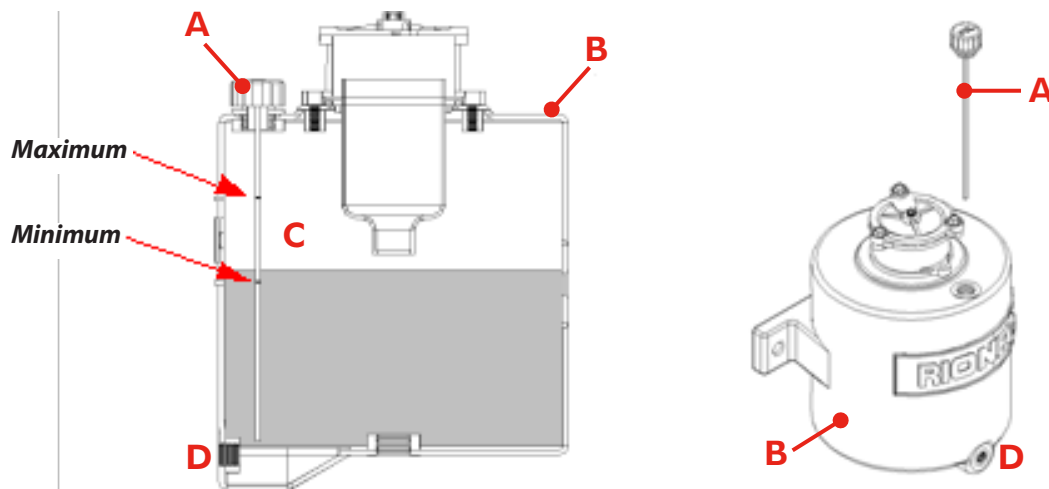

To let the oil out of the reservoir, unscrew the drain plug (D) and catch the oil in a drain pan.

Maintenance


EXTENSIVE PERIODIC MAINTENANCE

Have the high-pressure machine checked and maintained on a regular basis by a Spartan Tool technician.

MAINTENANCE SCHEDULE

Check oil levels	Before each use
Clean water filter	Before each use
Clean carriage	Weekly
Service engine	Every 250 working hours or at least once every 6 months
Lubricate moving parts	Every 250 working hours or at least once every 6 months
Clean pressure regulator	Every 250 working hours or at least once every 6 months
Renew pump oil	Every 500 working hours or once a year
Renew oil hydraulic system	Once a year
Decalcify suction valves	Once a year
Decalcify pressure valves	Once a year
Puncture nozzle holes	Before each use
<i>Replace parts immediately if there is wear or defect.</i>	

GP 5128 Giant Pump - 75729135

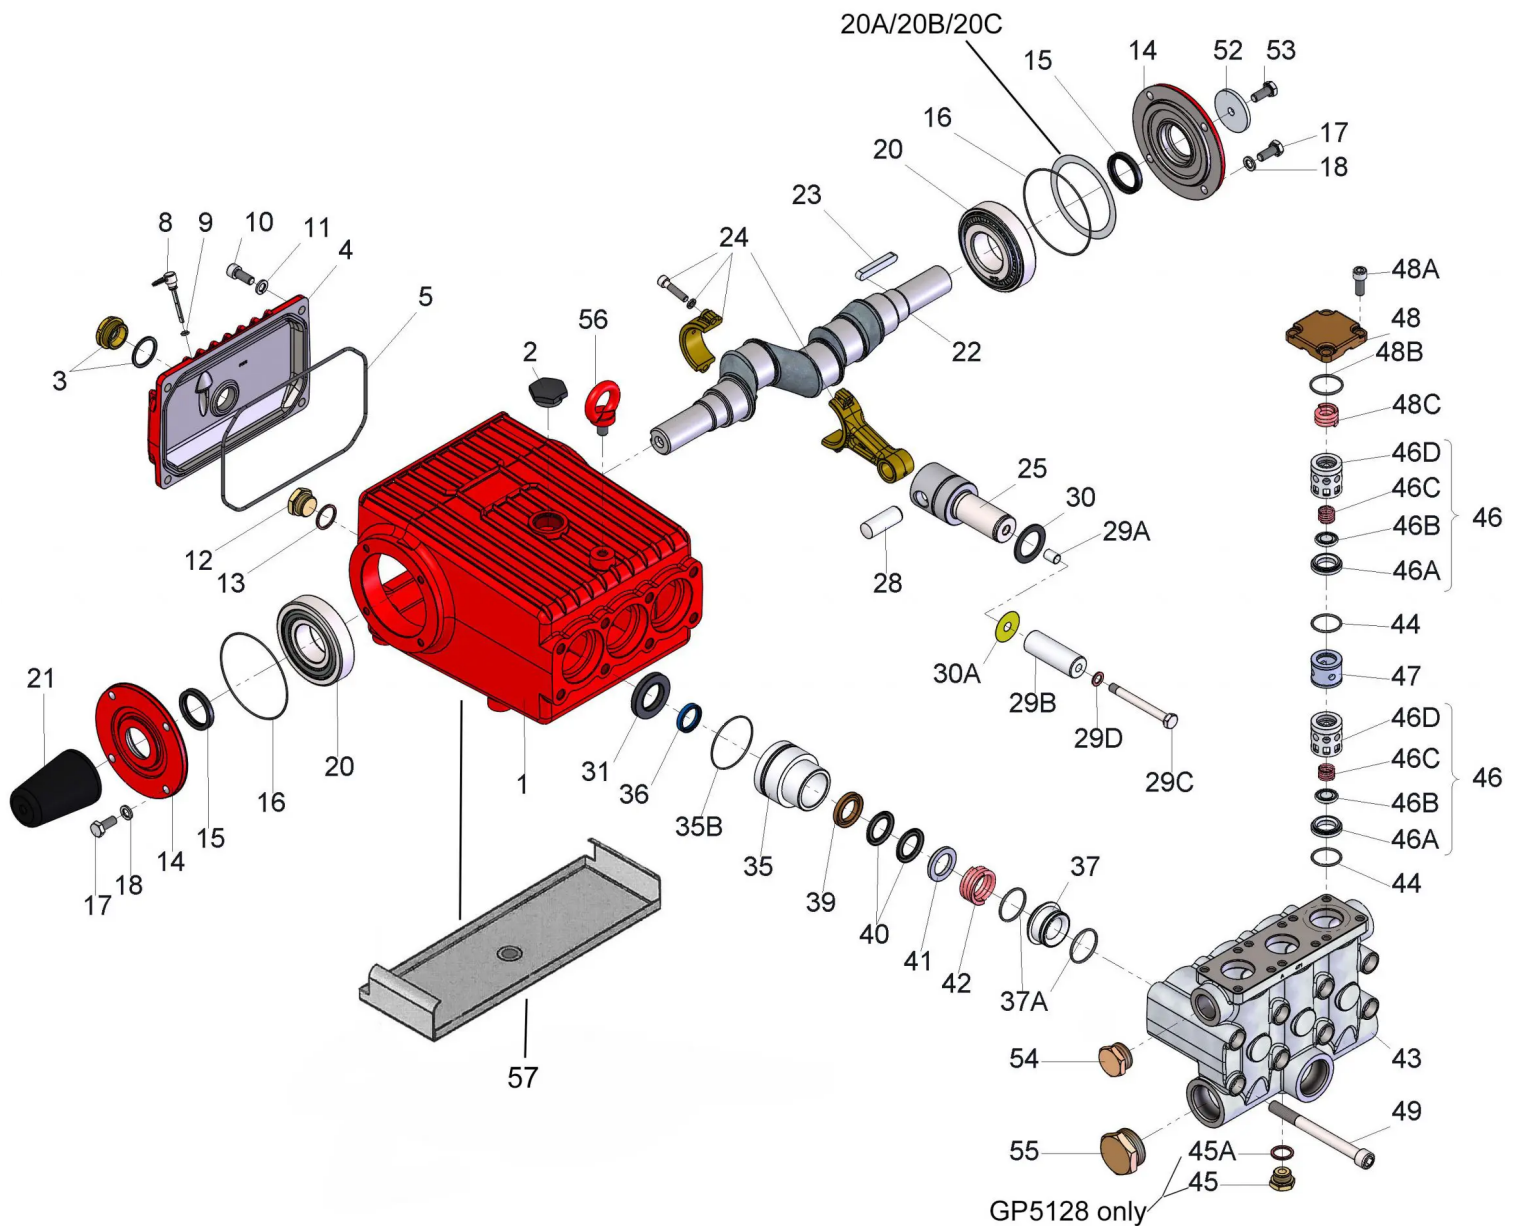

VALVE ASSEMBLY KIT (75730155)

Item	Part Number	Description	Qty.
44	79836900	O-Ring	6
46	79837200	Valve Assembly	6
48B	75729214	O-Ring, Valve Cap UUV Pump	3

OIL SEAL KIT

Item	Part Number	Description	Qty.
31	79965130	Oil Seal	3

PLUNGER PACKING KIT (75730150)

Item	Part Number	Description	Qty.
35B	79965132	O-Ring	3
36	75816805	Grooved Ring	3
37A	79965135	O-Ring	6
40	75816810	V-Sleeve	6

GP 5128 Giant Pump

Item	Part Number	Description	Qty.
1		Crankcase	1
2	77790200	Oil Filler Plug Assembly	1
3	73810208	Oil Sight Glass w/Gasket	1
4		Crankcase Cover	1
5	79906630	O-Ring	1
7		Drip Pan	1
8		Oil Dip Stick	1
9	75800511	O-Ring, Dip Stick	1
10	79965158	Inner Hexagon Screw	4
11		Spring Washer	4
12		Drain Plug, 3/4" BSP	1
13		Gasket, Drain Plug	1
14		Bearing Cover	2
15		Radial Shaft Seal	2
16		O-Ring	2
17		Hexagon Screw	8
18		Spring Washer	8
20		Taper Roller Bearing	2
20A*	79965118	Shim, 0.1mm	1-5
20B*		Shim, 0.15mm	1-5
20C*		Shim, 0.2mm	1-5
21	79965119	Shaft Protector	1
22		Crankshaft	1
23		Fitting Key	1
24		Connecting Rod Assembly	3
25		Crosshead Assembly	3
28		Crosshead Pin	3
29A	79965125	Centering Sleeve	3
29B		Plunger Pipe	3
29C	79965127	Tensioning Screw	3
29D	79835000	Copper Ring	3

Item	Part Number	Description	Qty.
30	75780422	Oil Scraper	3
30A		Washer for Drip Shield	3
31	79965130	Radial Shaft Seal	3
35		Seal Sleeve	3
35B	79965132	O-Ring O-Ring	3
36	75816805	Grooved Ring	3
37		Seal Case	3
37A	79965135	O-Ring	6
39	75720105	Pressure Ring	3
40	75816810	V-Sleeve	6
41		Sleeve Support Ring	3
42	79965140	Tension Spring	3
43		Valve Casing	1
44	79836900	O-Ring	6
45	71705948	Giant P221 1/2" BSP Plug	1
45A		Copper Seal Ring	1
46	79837200	Valve Assembly	6
46A	79837300	Valve Seat	6
46B	79837400	Valve Plate	6
46C	79837500	Valve Spring	6
46D	79837600	Spacer Pipe	6
47		Spacer Ring	3
48	75730391	Valve Cap, UUW Pump	3
48A	79965158	Inner Hexagon Screw	12
48B	79836910	O-Ring	3
48C	79837100	Tension Spring	3
49	79965161	Inner Hexagon Screw	8
52		Disc for Crankshaft	1
53		Hexagon Screw	1
54		Plug, 1" NPT/BSP	1
55		Plug, 1-1/2" NPT/BSP	1
56		Eye Bolt	1
57		Drip Pan	1



GENERAL SPECIFICATIONS

Description	Unit
Dimensions	See "Appendix B, Machine Dimensions" on page 42
Water tank capacity	~80 gal. per tank
Fill medium	Water (H2O) maximum
Temperature medium	132° F
Total length of high-pressure hose	~360 ft.
Diameter of high-pressure hose	½" (NW13)
Total length of supply hose	115 ft.
Diameter of supply hose	¾" (NW19)
Hydraulic oil type	Hestia 46 (<i>Replace once a year</i>)
Hydraulic oil tank capacity	5 liters
Maximum hydraulic temperature	80° C
Pressure regulator	ULH 262-2H
Year of construction	See name plate on frame

MOTOR

Description	Unit
Type	Kubota WG1605
Number of cylinders	4
Power	37 kW (50 HP)
Fuel	Unleaded Gasoline
Fuel tank	~8 gal.
Cooling	Water cooled via heat exchanger
Weight	270 lbs.
Battery	45AH 300A
Engine oil	10W30 API/SF-CC or better
Engine oil capacity	1.59 gal.

Normal coolant—engine is protected to -18° F.

Special coolant—engine is protected to -36° F.

Technical Specifications

PUMP

Description	Unit
Type	Speck P52
Maximum pressure	See name plate on frame
Maximum output	See name plate on frame
Weight	120 lbs.
Maximum water temperature	60° C / 140° F
Gear oil	GX 80W90
Gear oil capacity	118 fl. oz.



FAILURE	REASON	SOLUTION
Engine does not start or stops abruptly.	Machine has run out of fuel.	Add fuel.
	Main or secondary fuse blown.	Replace the defective fuse and restart engine. If problem repeats, contact Spartan Tool Customer Service.
	Battery voltage too low.	Charge or replace the battery.
	Emergency stop activated.	Rotate the emergency stop button in order to be able to start up again.
	Insufficient level in the water tank (for cooling system).	Fill the water tank and let the machine cool down. When cooled, the machine can be started again.
	Engine coolant level low.	Fill the cooling system at the expansion tank.
	Temperature of engine coolant too high.	Let the machine cool down.
The high-pressure pump does not produce the required pressure.	Water tank empty.	Fill the water tank.
	Supply valve to water filter closed.	Open the supply valve.
	Water filter clogged.	Stop the machine and clean the water filter.
	Air in the high-pressure pump.	Allow the machine to run a few minutes. The failure will normally disappear. If not, contact Spartan Tool Customer Service.
	Suction valves blocked.	Carefully loosen the valves and de-scale them, if necessary.
	V-belt not sufficiently tightened.	Tighten the V-belt; replace if necessary.
	Suction valves worn out.	Contact Spartan Tool Customer Service.
Pressure varies.	Water level in tank too low.	Stop the engine, refill the tank and restart engine.
	Water supply valve not sufficiently opened.	Open the supply valve completely.
	Water filter clogged.	Stop the machine and clean the filter.
	Pump sucks air.	Stop the machine and check all hoses and couplings for leakage.
	Nozzle clogged.	Stop the machine and clean the nozzle (clean the nozzle holes).
	Pressure valves dirty or worn.	Stop the machine. Check the condition of the pressure valves. Clean or replace them.
	Pump gasket worn out.	Stop the machine and replace gasket.
	Pump v-belts slip.	Stop the machine and tighten the belts.
	Ceramic plungers in the pump damaged.	Contact Spartan Tool Customer Service.
	Pressure control clogged or internally damaged.	Contact Spartan Tool Customer Service.

Troubleshooting

FAILURE	REASON	SOLUTION
Hydraulic reel does not wind the hose.	Handle in wrong position.	Put the handle into the correct position.
	Hydraulic tank almost empty.	Refill the tank. Check the system for leakage.
	Attachment bolt for control lever of hydraulic system is loose.	Fasten the bolt and put the lever into the correct position.
	Working pressure set too low.	Increase the working pressure, if possible.
	Hydraulic tank return filter dirty.	Switch off the machine and clean the return filter.
	Hydraulic system damaged.	Contact Spartan Tool Customer Service.
No reaction from the Riomote controller.	No current.	Recharge the battery.
		Use new battery.
		Contact points are dirty.
		Check fuses.
	Transmitter is not on.	Contact Spartan Tool Customer Service if problem is frequent or ongoing.
		Activate the transmitter (link to the receiver).
Warning signal after short working time.	Transmitter out of reach from receiver.	Put the machines closer together. Move transmitter closer.
Warning signal after short working time.	Battery discharged / defective.	Charge or replace the Riomote® battery.
		Check the terminal connections.
Transmitter indications are good but functions are not executed.	Emergency stop pushed in.	Unlock emergency stop.
	Receiver has no current.	Check / replace fuses.
	No radio connection.	Check functions of control lights.
Certain functions are not executed.	Receiver is faulty.	Contact Spartan Tool Customer Service.
	Interruption in electric current.	Check all plugs. Plug in and push. Check control lights if functions are indicated.

APPENDIX A

Engine Control Module




The Engine Control Module (ECM) consists of two major functions.

The function of the Engine Safety Protection Panel is to **monitor engine parameters** to alert the operator to any abnormal conditions requiring attention as well as any operating limits that may be exceeded requiring the machine to be immediately shut down. Once the engine is started, the ECM has primary control of the engine providing prealarms, alarms and safety shutdowns.

This attachment provides the operator with information necessary to understand the operation of the Engine Safety Precautions Panel.

The diagram below identifies the indications available on the Engine Safety Protection Panel which will be explained on the subsequent pages.





INDICATOR LAMPS AND ENGINE CONTROL UNIT INDICATIONS

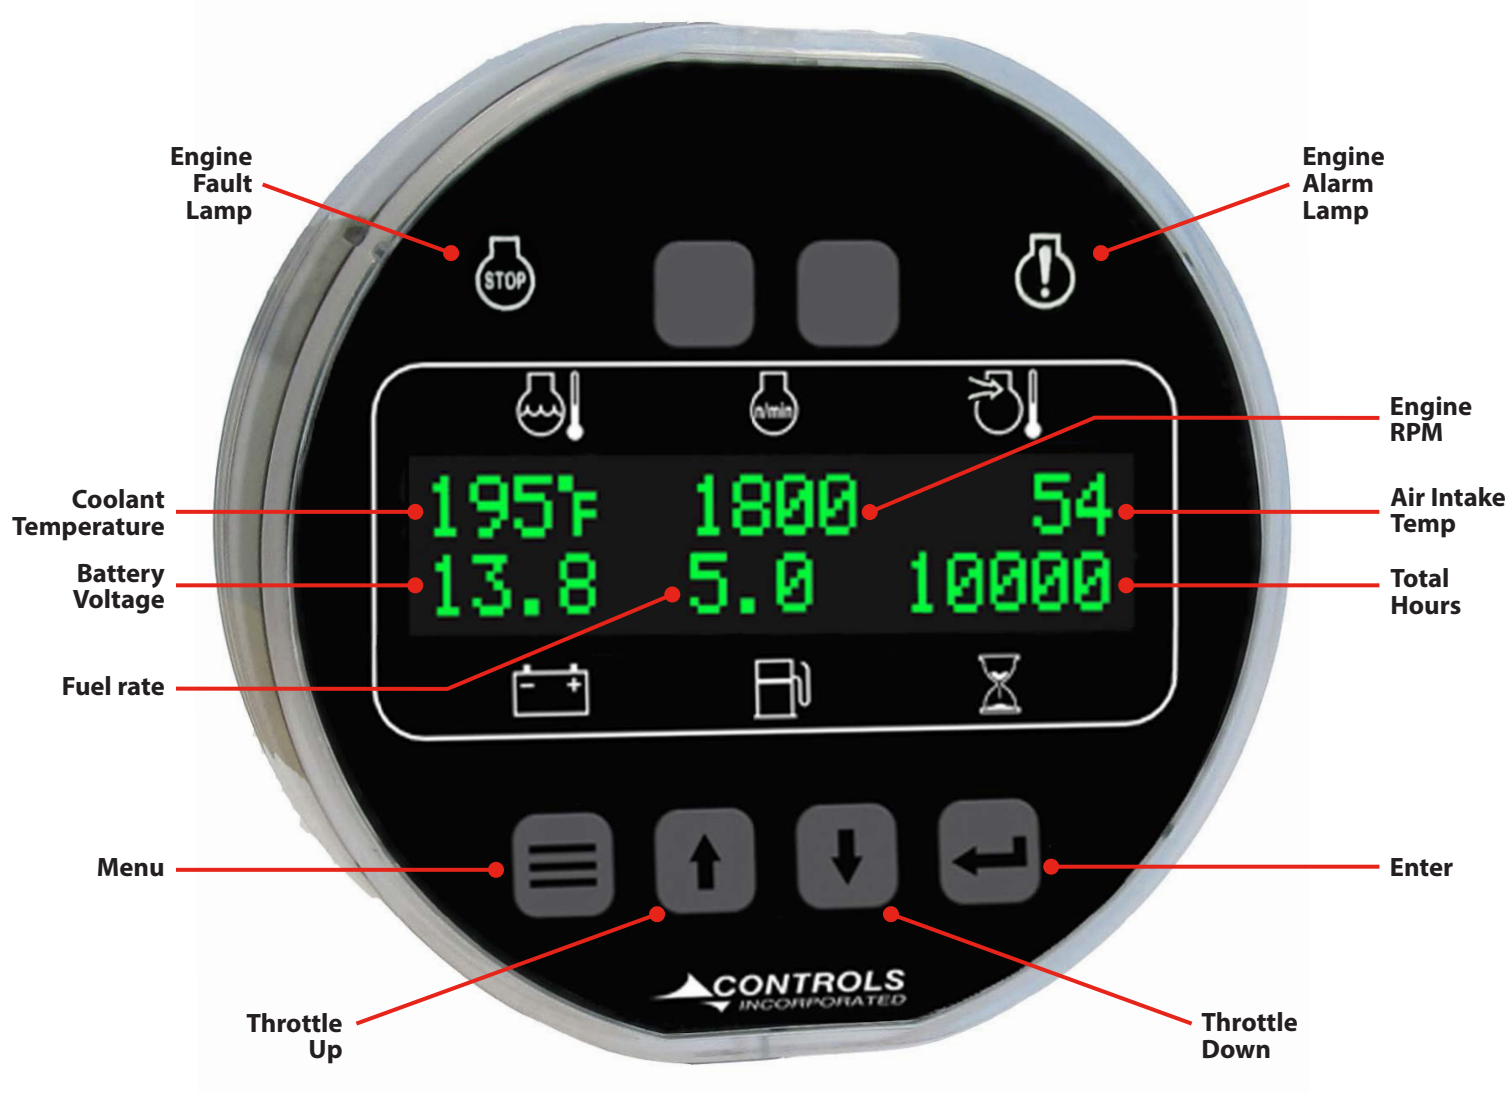



APPENDIX B

Machine Dimensions (in mm)

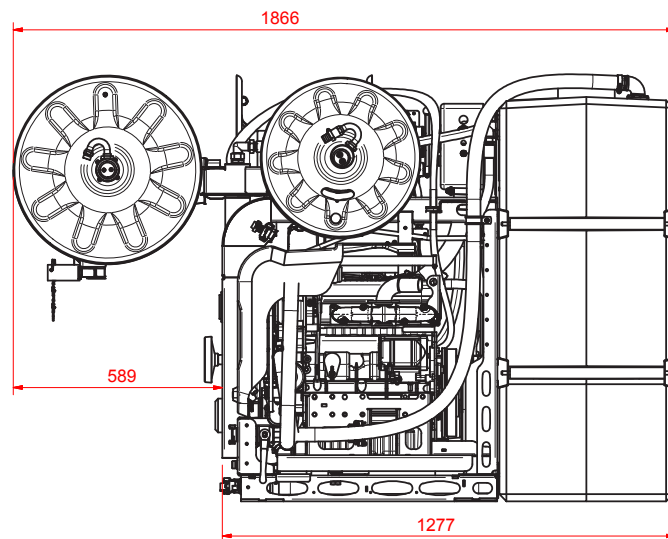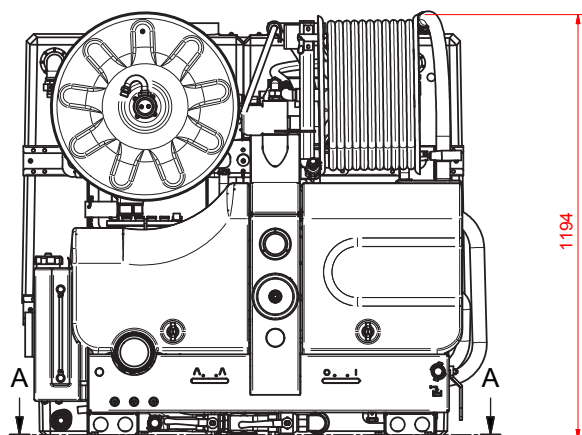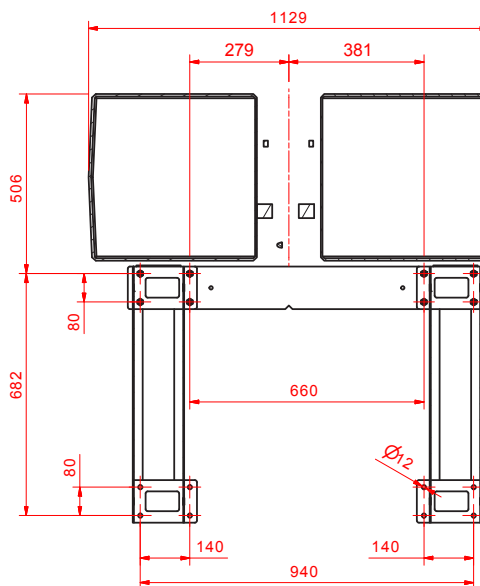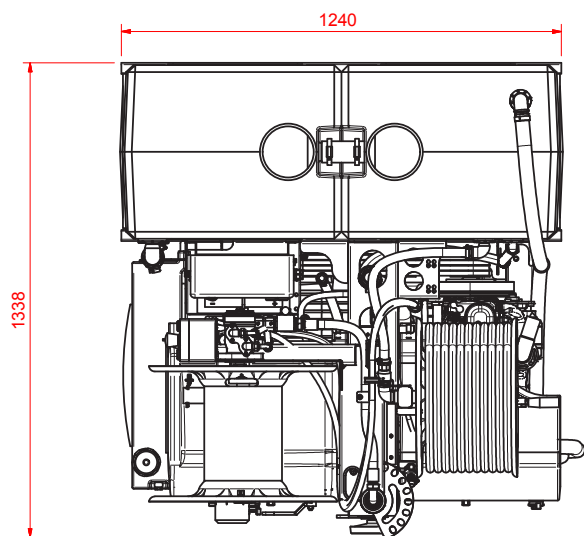

Part Number	Description	Qty.
79824700	Open Nozzle	1
79824600	Closed Nozzle	1
77799800	Handgun Assembly	1
77800600	Hose Guard Assembly, 2"	1
79873500	Anti-Turnaround Pipe Assembly	1
75729405	7-Channel Riomote® Control	1
75729410	9-Channel Riomote® Control	1
75729415	Riomote® Battery Charger	1
75729420	Riomote® Battery	1
75728000	Urban Series Antifreeze System	1
75729130	1/2" x 360' Maxflow Hose	1
75729120	HP Hose Reel Swivel Seal	1
75729105	HP 3-Way Ball Valve	1
75729103	Unloader Valve	1
75729104	Actuator Box	1

This image shows a full page of blank, lined paper. It features approximately 20 horizontal blue or grey lines spaced evenly apart, typical of notebook paper. The lines extend across the entire width of the page, leaving small margins at the top and bottom. There are no vertical lines, text, or other markings on the page.

Notes

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

YOUR URBAN WARRIOR

Unit Serial Number

Engine Serial Number

Pump Serial Number

[illegible]



SPARTAN

FOR TOUGH CUSTOMERS.

SINCE 1943

CONTACT US

Spartan Tool LLC

1618 Terminal Road

Niles, MI 49120

800.435.3866

SpartanTool.com